

# **PremiumDrinker**

for broiler growing

## **PremiumDrinker – optimal water supply for broilers**

drinking nipple protector.

This is why the new PremiumDrinker was

developed specifically for broiler growing.

tube, the nipple CombiMaster and a special

The drinker consists of a larger nipple

Supplying broilers with a sufficient amount of fresh and clean drinking water is the most important requirement to achieve the optimum performance from the birds.

## CombiMaster

only 4 mm of the nipple protrude into the nipple tube -> minimum narrowing of the tube diameter

reinforced plastic casing with larger thread diameter -> high solidity

new drinking nipple tube with a diameter of 28 mm -> greater passage rate

use of high-quality materials (special synthetic material and stainless steel) -> high chemical resistance

### **Drinking nipple protector**

very simple assembly: protector is put onto the nipple

drinking nipple protector -> nipple activation from the side is not possible



Germany: Big Dutchman International GmbH Postfach 1163 · 49360 Vechta Tel. +49(0)4447 801-0 · Fax -237 big@bigdutchman.de www.bigdutchman.de

### USA: Big Dutchman, Inc.

Tel. +1 616 392 5981 · bigd@bigdutchmanusa.com www.bigdutchmanusa.com

### Brazil: Big Dutchman (Brasil) Ltda.

Tel. +55 16 2108 5300 · bigdutchmanbrasil@bigdutchman.com.br www.bigdutchman.com.br

Russia: 000 "Big Dutchman" Tel. +7 495 2295 171 · ikotov@bigdutchman.ru · www.bigdutchman.ru

Asia/Pacific: BD Agriculture (Malaysia) Sdn. Bhd. Tel. +60 3 33 61 5555 · bdasia@bigdutchman.com · www.bigdutchman.com China: Big Dutchman (Tianjin) Livestock Equipment Co., Ltd.

Tel. +86 10 6476 1888 · bdcnsales@bigdutchman.com www.bigdutchman.cn


### Larger nipple tube

This well thought-out system ensures that

the birds receive a sufficient amount of

water and at the same time reduces

wastage by splash water significantly.

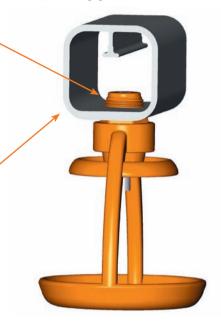

### The advantages at a glance

- less splash water because the nipple cannot be activated from the side;
- Iarge lower pin -> big and noticeable water drop;
- drip cup is not attached to the nipple tube any more -> improved hygiene;
- 1 greater water passage rate;
- use of high-quality materials;
- simple assembly of the drinking nipple protector: protector is put onto the nipple;
- maximum length of the drinker line 90 m for side supply.

